

NEW !

MINATO

Socket Adapter KH Series Loaded with Counter Function

To more **Certainly** and **Easily** to manage
Socket Adapter!

You can manage the number of use,
Pass and Fail easily with Programmer Control Soft.

Display Example of Control Soft

The screenshot shows the UniversalControlProgram software interface. It includes sections for Project information, Data file, Device information, Progress conditions, and Site #1. An 'Adaptor counter' dialog box is open, displaying a table for Site 1 with columns for Socket 1, Socket 2, Socket 3, and Socket 4. The table shows a value of 20 for Socket 1. Below the table are radio buttons for 'Used(Current)', 'Used(Total)', 'Pass(Current)', 'Pass(Total)', 'Fail(Current)', and 'Fail(Total)', along with a 'Warning threshold' set to 10000. Red arrows point from text labels to these fields: 'Number of Use' points to the 'Used' radio buttons; 'Number of Use (Total)' points to the 'Used(Total)' radio button; 'Number of Use Limit' points to the 'Warning threshold' field; 'Number of Pass' points to the 'Pass' radio buttons; 'Number of Fail' points to the 'Fail' radio buttons; 'Number of Fail (Total)' points to the 'Fail(Total)' radio button; and 'Number of Pass (Total)' points to the 'Pass(Total)' radio button.

※Software update might be needed.

Supported Programmer



MODEL 400/400 e+ Series



MODEL 500 Series

For detail information about M500 series programmer
please contact our business representatives.

Type of Socket Adapter KH Series

Package	Supported Flash Memory	Adapter Model
8SOP 150mil	Serial Flash	KH350T-1720
8SOP 208mil	Serial Flash	KH350T-1914
16SOP 300mil	Serial Flash	KH050T-2306
48TSOP	NOR Flash	KH350T-970
48TSOP	NAND Flash	KH060T-2258
56TSOP	NOR Flash	KH050T-2004



KH350T-1720



KH350T-1914



KH050T-2306



KH350T-970



KH060T-2258



KH050T-2004

※ The above Socket Adapters are AH type adapter supported the all handler

※ With the release of the adapters loaded with the counter function, the following current adapter models will be discontinued by the end of September, 2016. [H350T-1720D,H350T-1914E,H050T-2306C,H350T-970D,H060T-2258,H050T-2004C]

MINATO

MINATO HOLDINGS INC.
MINATO DEVICE COMPANY

□ Headquarters

(Head Office・Sales & Marketing Group)
4105, Minami Yamata-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa 224-0026, Japan
TEL : 045(591)5611
TEL : 045(591)5605
FAX : 045(592)2854
<http://www.minato.co.jp>
et-sales@minato.co.jp

□ Minato (Shanghai) Co.,Ltd.

2nd floor, I Building, Plainvim Industrial Park, Zhen'an Road No.76, Dongguan City, Guangdong Province, China.
TEL: +86-139-1756-6384
k_yamashita@minato.co.jp

□ Bangkok coordination office

32/23 Sino-Thai Tower 2F, Sukhumvit Rd.(Asoke) Klongtoey Nua, Wattana, Bangkok 10110 Thailand.
TEL: +66-9-2224-4933
Email: y_oomura@minato.co.jp